




If gSender is connected but the visualizer is disconnected and the controls are grayed out, the settings are likely missing.

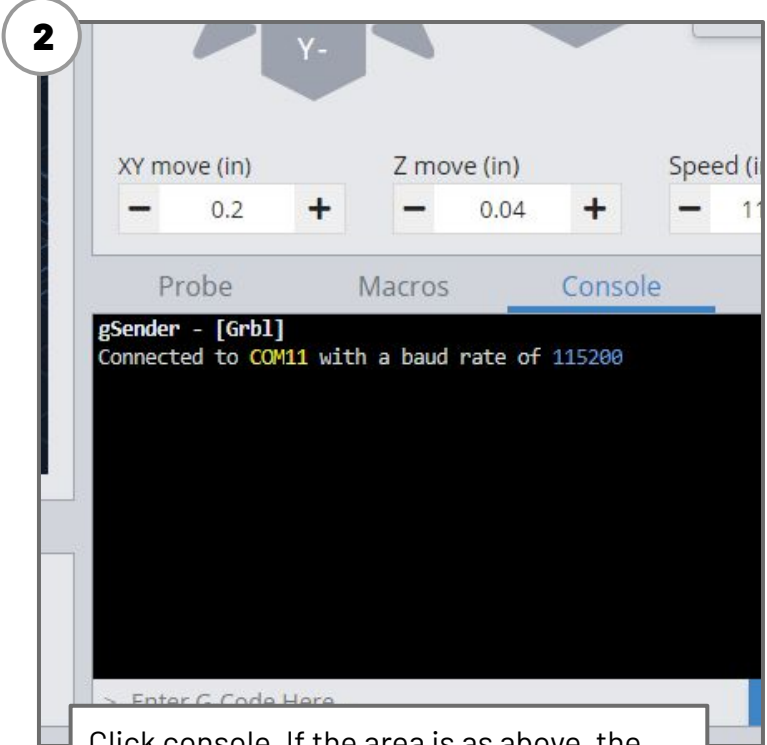


Click console. If the area is as above, the board is missing the settings and will need to be re-flashed.

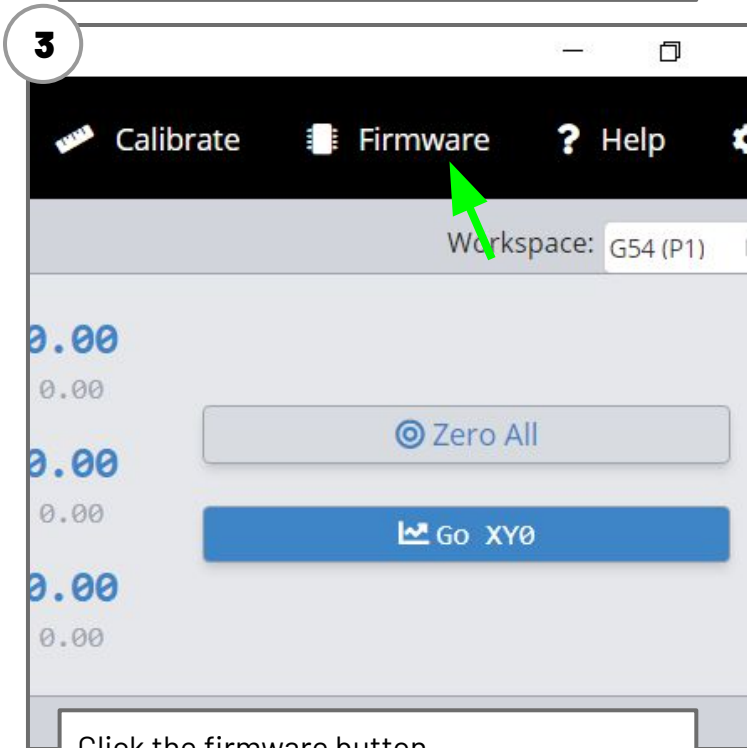


Click the firmware button.

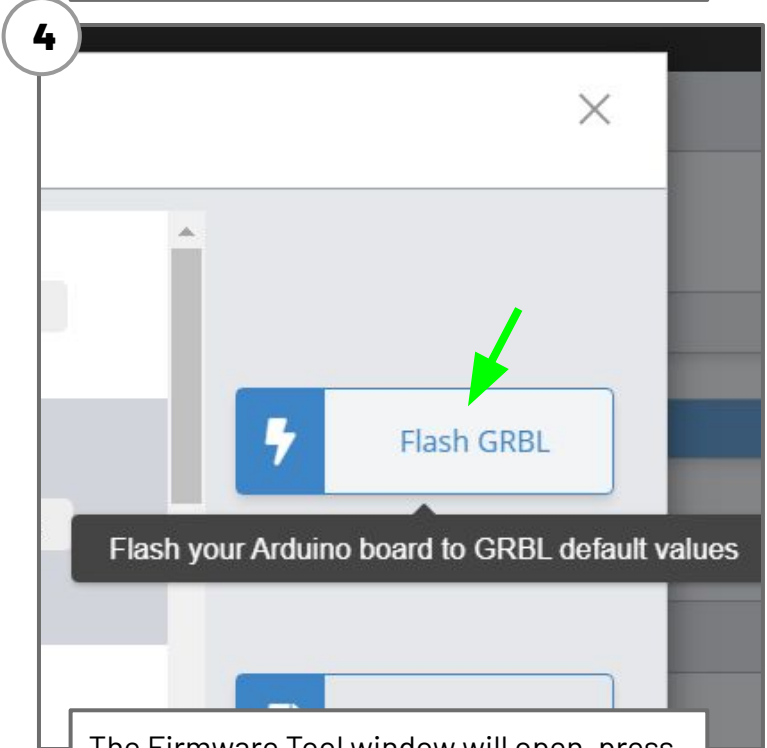


The Firmware Tool window will open, press "Flash GRBL".

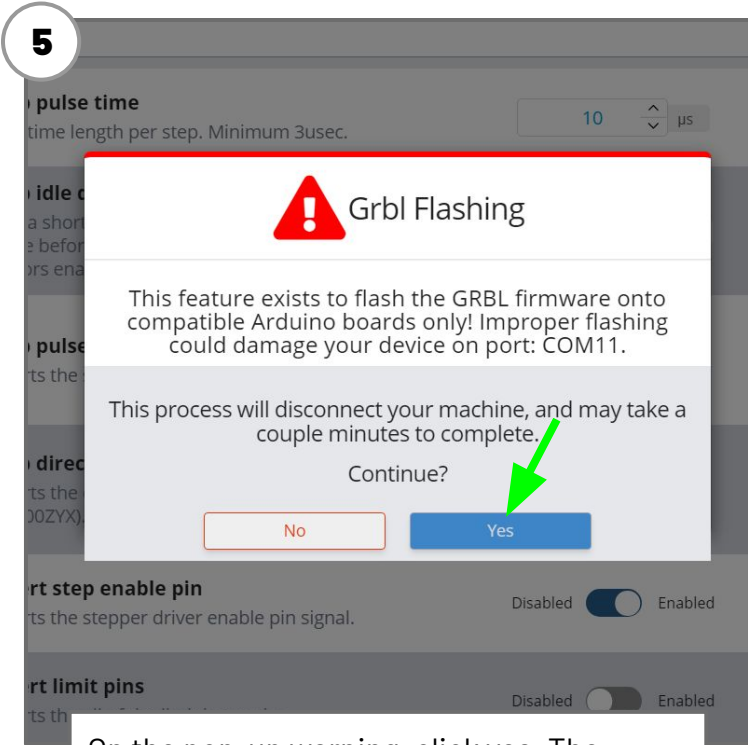


On the pop-up warning, click yes. The machine will begin the flashing process and disconnect from the machine.

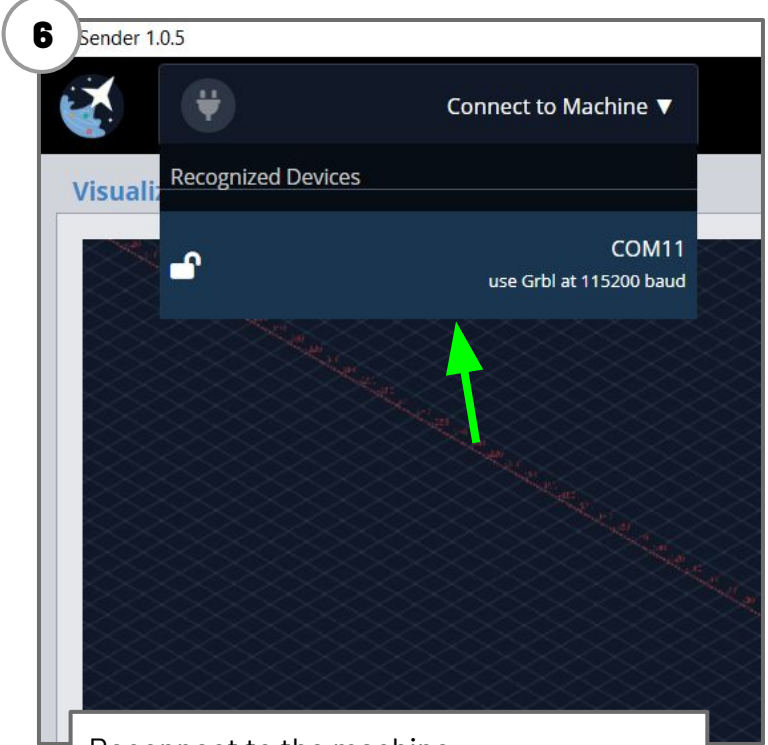

Reconnect to the machine

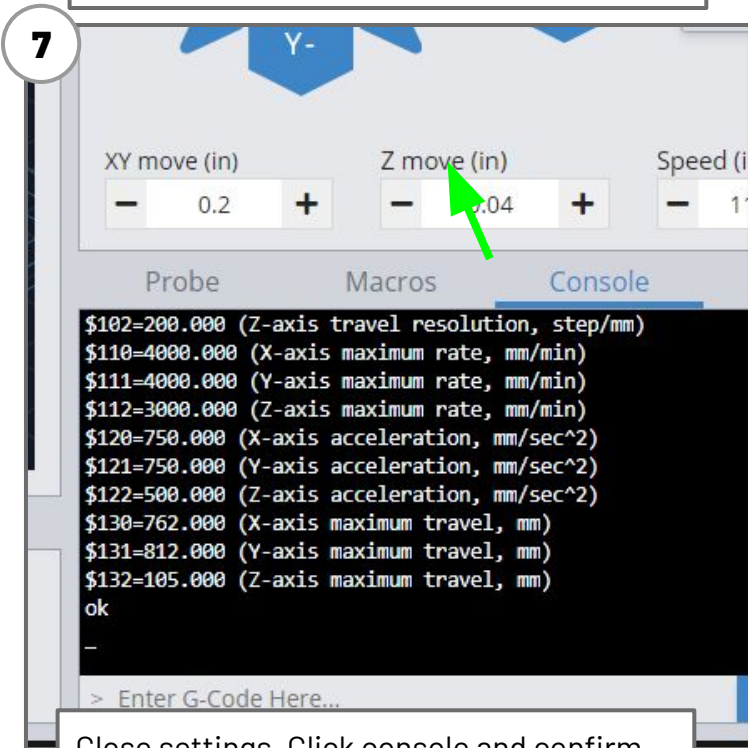


Close settings. Click console and confirm the settings are there.

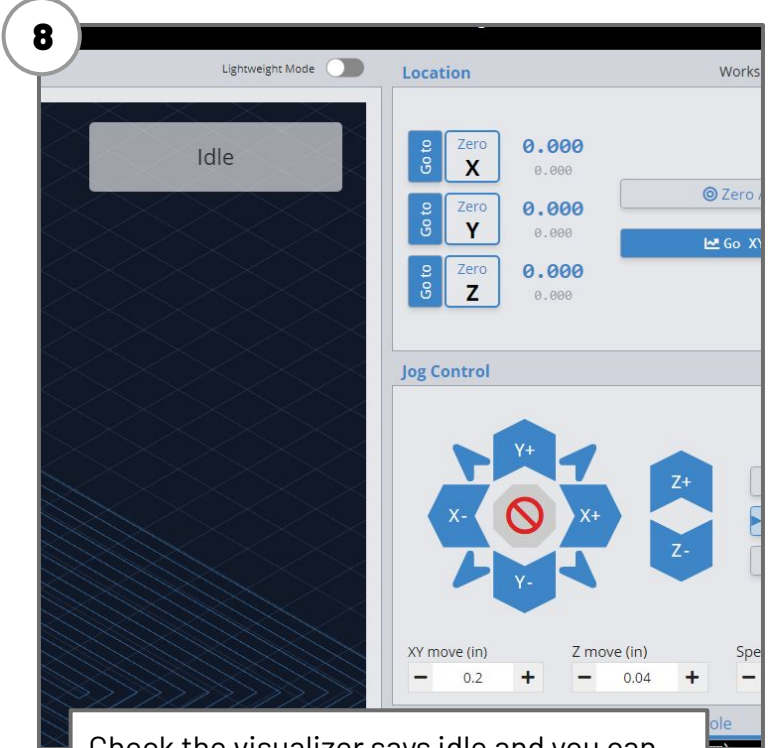

Check the visualizer says idle and you can jog your machine.

9

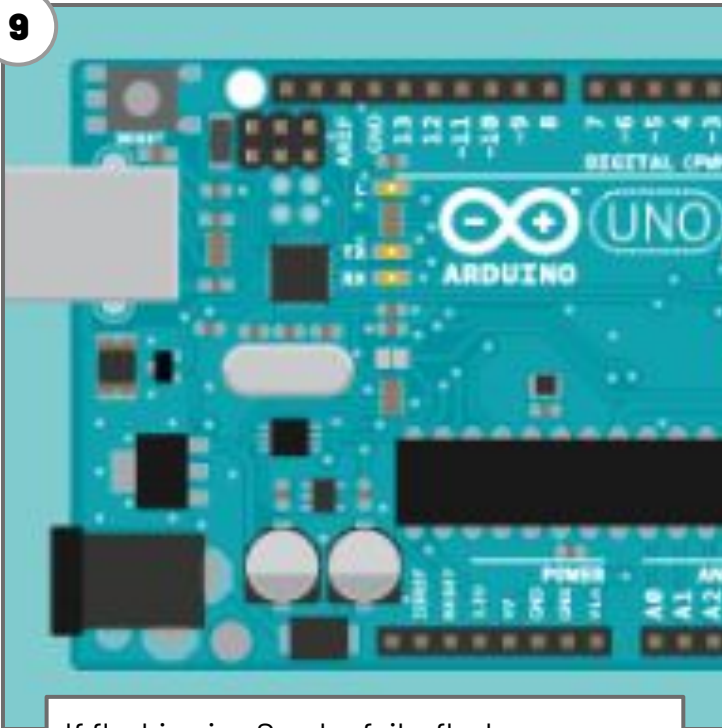

If flashing in gSender fails, flash your firmware using Arduino IDE

<https://resources.sienti.com/view/lmk2-grbl-firmware/#flashing-grbl-using-arduino-ide>